

**Brookville Mining Equipment Corporation**  
**Product Information Bulletin 62 (04-19-04)**  
**Brookville Battery Units**  
**Warnings for Engaging the E-Stop on Locomotives**

**Purpose:**

Operators need to be aware that engaging the E-Stop disconnects all electrical power to the unit, disabling all related functions including but not limited to tramming, regenerative braking, lights, sanders, horn, etc. It is very important to remember these locomotives are equipped with an air over hydraulic brake system. Engaging the E-Stop on these units **will not** apply the emergency/parking brakes.

**Action:**

Brookville has available a warning label (See Sample Below) to be applied near the E-Stop warning operators of this situation. Contact Brookville Equipment Corporation at (814) 849-2000 to have a warning label (part number T739) shipped to you at no charge. It is further recommended all electrical devices and mechanical systems (such as circuit breakers and brakes) be inspected and if found faulty they be repaired or replaced immediately as needed.

**Units Affected:**

Brookville manufactured battery locomotives.

